

Disponemos de repuestos para impresoras de marca: HP, Lexmark, Xerox, Kyocera; aquí informamos los números de parte de los repuestos de mayor demanda:

Marca	Modelo de Impresora	Descripción	Número de p
Lexmark	Optra E 320/322	Fuser Assembly 110V	12G4484
Lexmark	E230/232/234/240	Maintenance Kit 110V	Kit-E230-110V
Lexmark	E230/232/234/240	Fuser Assembly 110V	40X4194 / 40X1300
Lexmark	Optra E250/350/450	Fuser Assembly 110V	40X2800
Lexmark	Optra T 420	Maintenance Kit 110V	Kit-T420-110V
Lexmark	Optra T 420	Fuser Assembly 110V	56P0648
Lexmark	Optra T 520/522	Maintenance Kit 110V	99A2420 / 56P9104
Lexmark	Optra T 520/522	Fuser Assembly 110V	99A2423
Lexmark	Optra T 610/612	Maintenance Kit 110V	99A1970
Lexmark	Optra T 610/612	Fuser Assembly 110V	99A1969
Lexmark	Optra T 614/616	Maintenance Kit 110V	99A1978

Repuestos de impresoras

Lexmark	Optra T 614/616	New Fuser Assembly 110V	99A1977
Lexmark	Optra T 620	Maintenance Kit 110V	99A2408
Lexmark	Optra T 620	New Fuser Assembly 110V	99A2402
Lexmark	Optra T 630/632	Maintenance Kit 110V	56P1409
Lexmark	Optra T 630/632	Fuser Assembly 110V	56P2542
Lexmark	Optra T 634	Maintenance Kit 110V	56P1855
Lexmark	Optra T 634	Fuser Assembly 110V	56P1859 / 56P2545
Lexmark	Optra T 640/642/644	Maintenance Kit 110V	40X0100
Lexmark	Optra T 640/642/644	Fuser Assembly 110V	40X2592
Lexmark	Optra T 650/652/654	Maintenance Kit 110V	40X4724 / 40X4767
Lexmark	Optra T 650/652/654	Fuser Assembly 110V	40X4418 / 40X5854
Lexmark	Optra W840	Maintenance Kit 110V	40X0956
Lexmark	Optra W840	Fuser Assembly 110V	40X0647
HP	LaserJet 1010/1015	Fuser Assembly 110V	RM1-0660-000
HP	LaserJet 1010/1015	Fuser Assembly 110V	RM1-0660-000
HP	HP COLOR LASERJET CM1015	Fuser Assembly 110V	RM1-4310-000
HP	LaserJet 1020	Fuser Assembly 110V	RM1-2086-000

HP	LaserJet 1022	Fuser Assembly 110V	RM1-2049-000
HP	LaserJet P1505	Fuser Assembly 110V	RM1-4208-000
HP	LaserJet 1000/1200/1150/1300	Fuser Assembly 110V	RG9-1493-000 RM1-07
HP	LaserJet 1160/1320	Fuser Assembly 110V	RM1-1289-080
HP	LaserJet 1160/1320	Fuser Assembly 110V	RM1-1289-080
HP	LaserJet P2015	Fuser Assembly 110V	RM1-4247-000
HP	LaserJet P2035/P2055	Fuser Assembly 110V	RM1-6405-000
HP	LaserJet 2200	Maintenance Kit 110V	H3978-60001
HP	LaserJet 2200	Fuser Assembly 110V	RG5-5559-110
HP	LaserJet 2300	Maintenance Kit 110V	U6180-60001
HP	LaserJet 2400/2420	Maintenance Kit 110V	H3980-60001
HP	LaserJet 2400/2420	Fuser Assembly 110V	RM1-1535-000
HP	LaserJet P3005	Fuser Assembly 110V	RM1-3740-000
HP	LaserJet M3027/M3035MFP	Fuser Assembly 110V	RM1-3740-000
HP	LaserJet M5035MFP	Fuser Assembly 110V	RM1-3007-000
HP	Color LaserJet CP1210/CP1510/CP1215/CP1515/CP1518/CP1012	Fuser Assembly 110V	RM1-5430-000
HP	Color LaserJet 2600	Fuser Assembly 110V	RM1-1820-000

HP	Color LaserJet 2605	Fuser Assembly 110V	RM1-1828-000
HP	Color LaserJet 2605DN	Fuser Assembly 110V	RM1-1824-000
HP	Color LaserJet CP2020/CP2025/CP2055	Fuser Assembly 110V	RM1-6738-000
HP	C2550/2820/2830/2840	Fuser Assembly 110V	RG5-7602-000
HP	Color LaserJet 3600/3800/3845	Fuser Assembly 110V	RM1-2665-180
HP	Color LaserJet 4700/4730	Fuser Assembly 110V	RM1-3131-000
HP	Color LaserJet 4700/4730	Fuser Assembly 110V	RM1-3131-000
HP	Color LaserJet CP4005N	Fuser Assembly 110V	RM1-3131-000
HP	LaserJet 4000/4050	Fuser Assembly 110V	C4118-69001
HP	LaserJet 4000/4050	Fuser Assembly 110V	RG5-2661-000
HP	LaserJet 4100	Maintenance Kit 110V	C8057-67903
HP	LaserJet 4100	Fuser Assembly 110V	RG5-5063-000
HP	LaserJet 4200	Maintenance Kit 110V	Q2429-69005
HP	LaserJet 4200	Fuser Assembly 110V	RM1-0013-000
HP	LaserJet 4300	Maintenance Kit 110V	Q2436-67901
HP	LaserJet 4300	Fuser Assembly 110V	RM1-0101-000
HP	LaserJet 4250/4350	Maintenance Kit 110V	Q5421-67903

Repuestos de impresoras

HP	LaserJet 4250/4350	Fuser Assembly 110V	RM1-1082-000
HP	LaserJet P4014N/P4015N/P4515n	Maintenance Kit 110V	CB506-67901
HP	LaserJet P4014N/P4015N/P4515n	Fuser Assembly 110V	RM1-4554-000
HP	LaserJet P4014N/P4015N/P4515n	Fuser Assembly 110V	RM1-4554-000
HP	LaserJet 5000	Maintenance Kit 110V	C4110-67901
HP	LaserJet 5000	Fuser Assembly 110V	RG5-5455-000
HP	LaserJet 5100	Maintenance Kit 110V	Q1860-67908
HP	LaserJet 5100	Fuser Assembly 110V	RG5-7060-000
HP	LaserJet 5200	Fuser Assembly 110V	RM1-2522-000
HP	LaserJet 8100/8150	Maintenance Kit 110V	C3914-67902
HP	LaserJet 8100/8150	New Fuser Assembly	RG5-6532-000
HP	Color LaserJet 8500	Fuser Assembly 110V	RG5-3060-000
HP	LaserJet 9000/9040/9050	Maintenance Kit 110V	C9152-69004
HP	LaserJet 9000/9040/9050	Fuser Assembly 110V	RG5-5750-000
XEROX	Phaser 5500	Maintenance Kit 110V	109R00731
XEROX	Phaser 5500	Fuser Assembly 110V	126K18300
Kyocera	Ecosys Fs-1920/3820N	Fuser Assembly 110V	FK-67(U)

Kyocera	Fs-9100DN	Fuser Assembly 110V	FK-700(U)
Kyocera	Fs-9500DN	New Fuser Assembly	FK-701(U)
Kyocera	Fs-9120DN/9520DN	Fuser Assembly 110V	FK-702(U)
HP	FILM FUSER 1000-1200	FILM FUSER 1000-1200	FILM FUSER 1000-1200
HP	FILM FUSER 1100	FILM FUSER 1100	FILM FUSER 1100
HP	FILM FUSER 2100	FILM FUSER 2100	FILM FUSER 2100
HP	FILM FUSER 2200-2300	FILM FUSER 2200-2300	FILM FUSER 2200-2300
HP	FILM FUSER 2400	FILM FUSER 2400	FILM FUSER 2400
HP	FILM FUSER 3005	FILM FUSER 3005	FILM FUSER 3005
HP	FILM FUSER 4200	FILM FUSER 4200	FILM FUSER 4200
HP	FILM FUSER 4100-4050	FILM FUSER 4100-4050	FILM FUSER 4100-4050
HP	FILM FUSER 4250-4350	FILM FUSER 4250-4350	FILM FUSER 4250-4350
HP	FILM FUSER 5100-5200	FILM FUSER 5100-5200	FILM FUSER 5100-5200

Si requieres un respuesta específico [contáctanos](#) .

Si deseas descargar este catálogo, [regístrate](#)